






























| Part no. | Part | Image | Price |
|-------------------------|-------------------------------------|--|-------|
| Electronic parts | | | |
| TMB-101 | 42" LED display |  | |
| TMB-102 | Main board |  | |
| TMB-103 | I/O board |  | |
| TMB-104 | 12V 5V power supply |  | |
| TMB-105 | 12V power supply |  | |
| TMB-106 | RGB LED driver and remote controler |  | |
| TMB-107S | "Start" button with switch |  | |








| | | | |
|----------|--------------------------------|--|--|
| TMB-107L | "Left cut" button with switch |  | |
| TMB-107R | "Right cut" button with switch |  | |
| TMB-107A | Button LED light |  | |
| TMB-108 | Speaker |  | |
| TMB-109 | Power socket with fuse |  | |
| TMB-110 | Power cord |  | |
| TMB-111 | 12cm 12V cooling fan |  | |
| TMB-112 | Mechanical counter |  | |

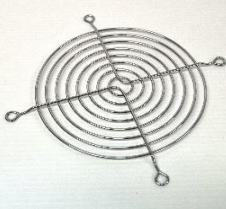


| | | | |
|---------------|---|--|--|
| TMB-113 | Service button |  | |
| Wiring | | | |
| EU2-1595 | Button switches and lights wiring |  | |
| EU2-1596 | Counters and service button wire (counters and service button not included) |  | |
| EU2-1597 | RGB LED extension wire |  | |
| EU2-1598 | Ticket dispenser wire |  | |
| EU2-1308-2 | I/O board to Main Board USB wire |  | |
| EU2-1599 | Coin acceptor wire |  | |
| EU2-1600 | LED power wire |  | |

| | | | |
|-------------|-------------------------------|--|--|
| EU2-1607 | Bill acceptor wire |  | |
| EU2-1608a | Cooling fan wiring |  | |
| EU2-1626 | Main Board power wire |  | |
| EU2-1627 | RGB LED controller power wire |  | |
| EU3-1628 | I/O board wiring |  | |
| EU2-1629 | I/O board power wire |  | |
| EU2-1630-1 | Socket to power supply wire |  | |
| EU2-1630a-2 | Power supply extension |  | |

| | | | |
|------------------------------|--------------------------|--|--|
| EU2-1644 | Speakers wiring |  | |
| TMB-113 | 3m HDMI cord |  | |
| Decals and decorative | | | |
| TMB-301 | Display cover with decal |  | |
| TMB-302 | Front panel cover |  | |
| TMB-303 | Lower front logo |  | |
| TMB-304L | Left side sticker |  | |
| TMB-304R | Right side sticker |  | |
| TMB-305 | Base front sticker set |  | |

| | | | |
|-----------|--|--|--|
| TMB-306L | Base left side sticker |  | |
| TMB-306R | Base right side sticker |  | |
| TMB-307 | Marquee complete |  | |
| TMB-307-T | Timberman marquee plexi |  | |
| TMB-307-B | Timberman logo marquee letters |  | |
| TMB-308T | Upper display aluminium profile with sticker |  | |
| TMB-308M | Lower display aluminium profile with sticker |  | |
| TMB-308B | Lower front aluminium profile with sticker |  | |

| | | | |
|-------------------------|---|--|--|
| TMB-309 | Front panel with LED's |  | |
| TMB-310B | Bill acceptor cover |  | |
| TMB-310C | Coin acceptor cover |  | |
| TMB-311 | Electronic coin acceptor mounting panel | NO IMAGE | |
| TMB-312 | Side wall rim |  | |
| Mechanical parts | | | |
| TMB-401 | Base wheel |  | |
| TMB-402 | Leg leveler |  | |
| TMB-403 | 28mm lock with keys |  | |

| | | | |
|----------------|-----------------------------|---|--|
| TMB-404 | Fan cover |  | |
| TMB-405 | Tickets holder |  | |
| TMB-406 | Cashbox | NO IMAGE | |
| TMB-407 | Front panel fastener |  | |