# Instruction of Lollipops Vending Machine



Please read the instruction first before the machine is

used.

## **Safety Precautions**

#### Attention

- DO NOT put the machine on places uneven, sloping and easily be shaken.
- Check wires and cables regularly
- Protect wires from damage by rats.
- DO Not put the machine under the direct sunlight, it will damage the inside parts.

#### Warning

- Always plug into a grounded circuit.
- The power must be turned off before any movement.
- DO NOT let the machine fall down or be hit.
- DO NOT put pour any liquid to the machine or put it them leaking or any web location.
- DO NOT put the machine near fire.
- ٠

#### Danger

- DO NOT touch the power cord with wet hand.
- DO NOT let the power cord be scraped, cut or over bended.
- DO NOT put heavy objects on the cord.
- DO NOT use any damaged power cord.
- DO NOT let Non-professionals check or repair the machine.
- DO NOT perform repairs or maintenance on this machine with the power on.

### **Table of Contents**

۱.	Technical parameters and parts	1
II.	How to Play	1
III.	Appearance	2
IV.	Auto Test	4
v.	Set up	5
VI.	Maintenance	8
VII.	Warranty Terms	8

### I. Technical parameters and parts

#### 1. Technical parameters

Dimension: W730\*D745\*H1520 (mm) Weight: 70KG Power: 60W

#### 2. Parts

No.	Name	Quantity
1	Key	1
2	Power Cord	1
3	Manual	1
4	Belt	1

Before product use, please confirm the product content first, if anything is missing, please contact us right away.

### II. How to Play

- 1) Insert coin.
- 2) Press button, lights running.
- 3) Press button, lights stop running, the lighted number is the winning prize number.
- 4) The machine release prize, get prize from the exit.


# III. Appearance

#### **Frond View**




Remark: If lollipops can not be releast for run out, blocked or other reason. Please press Start Button and lease lollipops again.

#### **Back View**

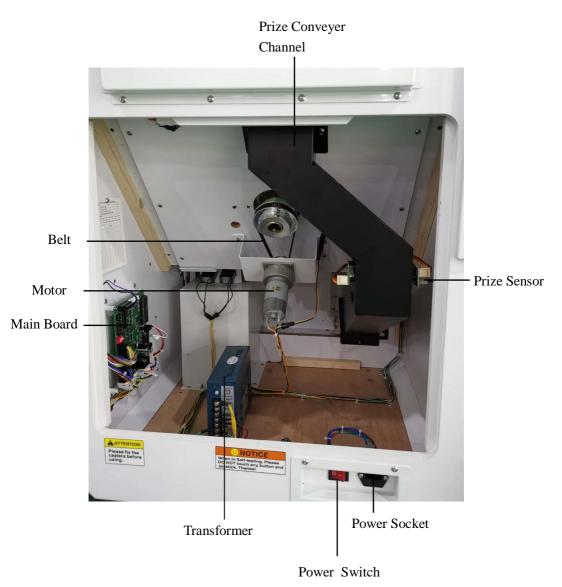

#### Front Door inside View

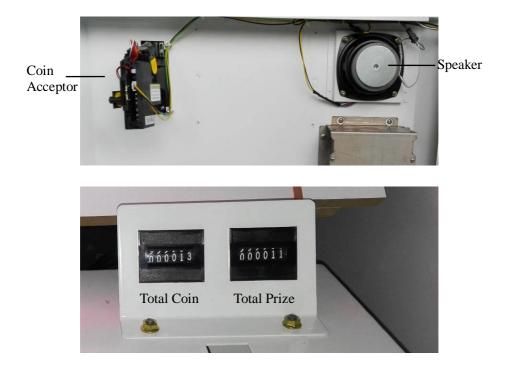

### IV. Auto Test

#### 1. Start up auto test:

- a) Start button
- b) Coin acceptor
- c) Motor
- d) Prize sensor


Please don't touch start button or other parts when auto testing.

#### Get this game on <u>www.magicplay.eu</u>

#### 2. Error Code

Error code	Error
E1	Start button damage
E2	Prize sensor damage
E3	Motor or prize sensor damage

### V. Set up

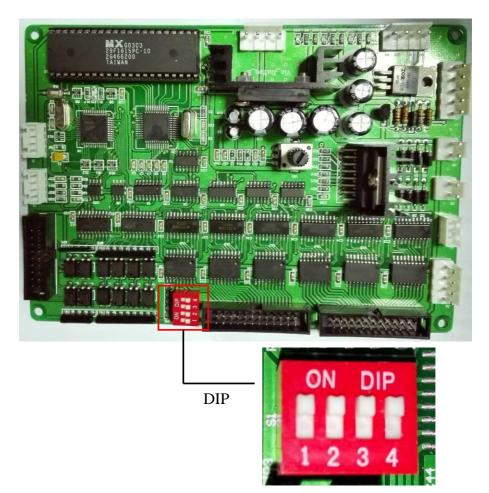

#### 1. Coins per play

Coin	DIP Switch		
Colli	1	2	
1	ON	ON	
2	OFF	ON	
3	ON	OFF	
4	OFF	OFF	

#### 2. game volume

#### Setting method

- 1) Machine power on.
- 2) Set Switch DIP 3: OFF.
- 3) Press start button to choose vovume.
- 4) Choose degree and set Switch DIP 3: ON. Finish setup.

#### 3. Degree of difficulty

#### Setting method

- 1) Machine power on.
- 2) Set Switch DIP 4: OFF.
- 3) Press start button to choose difficulty.
- 4) Choose degree and set Switch DIP 4: ON. Finish setup.

DIP-4			
ON	Standby		
OFF	Difficulty: 0-18		

Difficulty list as following:

#### Get this game on <u>www.magicplay.eu</u>

Degree of difficulty	prize rate	Total prize per 100 play	1 occurrence number	2 occurrence number	3 occurrence number	5 occurrence number	10 occurrence number
0			Random				
1	1.8	180	67	17	8	5	3
2	1.7	170	69	16	8	5	2
3	1.6	160	78	11	5	3	3
4	1.5	150	79	12	4	3	2
5	1.4	140	84	10	2	2	2
6	1.3	130	87	7	3	2	1
7	1.2	120	86	10	3	1	0
8	1.1	110	90	10	0	0	0
9	1	100	100	0	0	0	0

#### Degree of difficulty and prize rate list

### VI. Maintenance

Keep the machine clean by using mild types of cleaners

Use NON-FLAMMABLE solvents for cleaning. DO NOT use gasoline kerosene or thinners.

### VII. Warranty Terms

- 1. 1 year limited warranty from date of delivery, other than abuse, natural calamities or improper servicing.
- 2. This warranty does not cover the following:
  - Damage due to improper installation and/or use.
  - Game abuse or misuse
  - Stuck or jammed coin mechanisms (caused by improper coin usage).
  - Damage from repairs or modifications without our authorization.
  - Damage incurred during shipping/transit from our warehouse.
  - Damage caused by weather, water, lightening or electrical damage.
  - Damage due to extreme heat over 90°F or temperatures below 65°F.

Get this game on <u>www.magicplay.eu</u>