

Get this game on [www.magicplay.eu](http://www.magicplay.eu)

# Instruction of Lollipops Vending Machine



Please read the instruction first before the machine  
is used.

## **Safety Precautions**

### **Attention**

- ♦ DO NOT put the machine on places uneven, sloping and easily be shaken.
- ♦ Check wires and cables regularly
- ♦ Protect wires from damage by rats.
- ♦ DO NOT put the machine under the direct sunlight, it will damage the inside parts.

### **Warning**

- ♦ Always plug into a grounded circuit.
- ♦ The power must be turned off before any movement.
- ♦ DO NOT let the machine fall down or be hit.
- ♦ DO NOT put pour any liquid to the machine or put it them leaking or any web location.
- ♦ DO NOT put the machine near fire.
- ♦

### **Danger**

- ♦ DO NOT touch the power cord with wet hand.
- ♦ DO NOT let the power cord be scraped, cut or over bended.
- ♦ DO NOT put heavy objects on the cord.
- ♦ DO NOT use any damaged power cord.
- ♦ DO NOT let Non-professionals check or repair the machine.
- ♦ DO NOT perform repairs or maintenance on this machine with the power on.

# Table of Contents

- I. Technical parameters and parts ..... 1
- II. How to Play ..... 1
- III. Appearance ..... 2
- IV. Set up ..... 5
  - 1. Coins per play ..... 6
  - 2. Degree of difficulty ..... 6
- V. Maintenance ..... 8
- VI. Warranty Terms..... 8

## **I. Technical parameters and parts**

### **1. Technical parameters**

Dimension: W730\*D745\*H1520 (mm)

Weight: 70KG

Power: 60W

### **2. Parts**

No.	Name	Quantity
1	Key	1
2	Power Cord	1
3	Manual	1
4	Belt	1

Before product use, please confirm the product content first, if anything is missing, please contact us right away.

## **II. How to Play**

- 1) Insert coin.
- 2) Press button, lights running.
- 3) Press button, lights stop running, the lighted number is the winning prize number.
- 4) The machine release prize, get prize from the exit.


### III. Appearance

#### Front View




Remark: If lollipops can not be released for run out, blocked or other reason. Please press Reset Button and lease lollipops again.

**Back View**

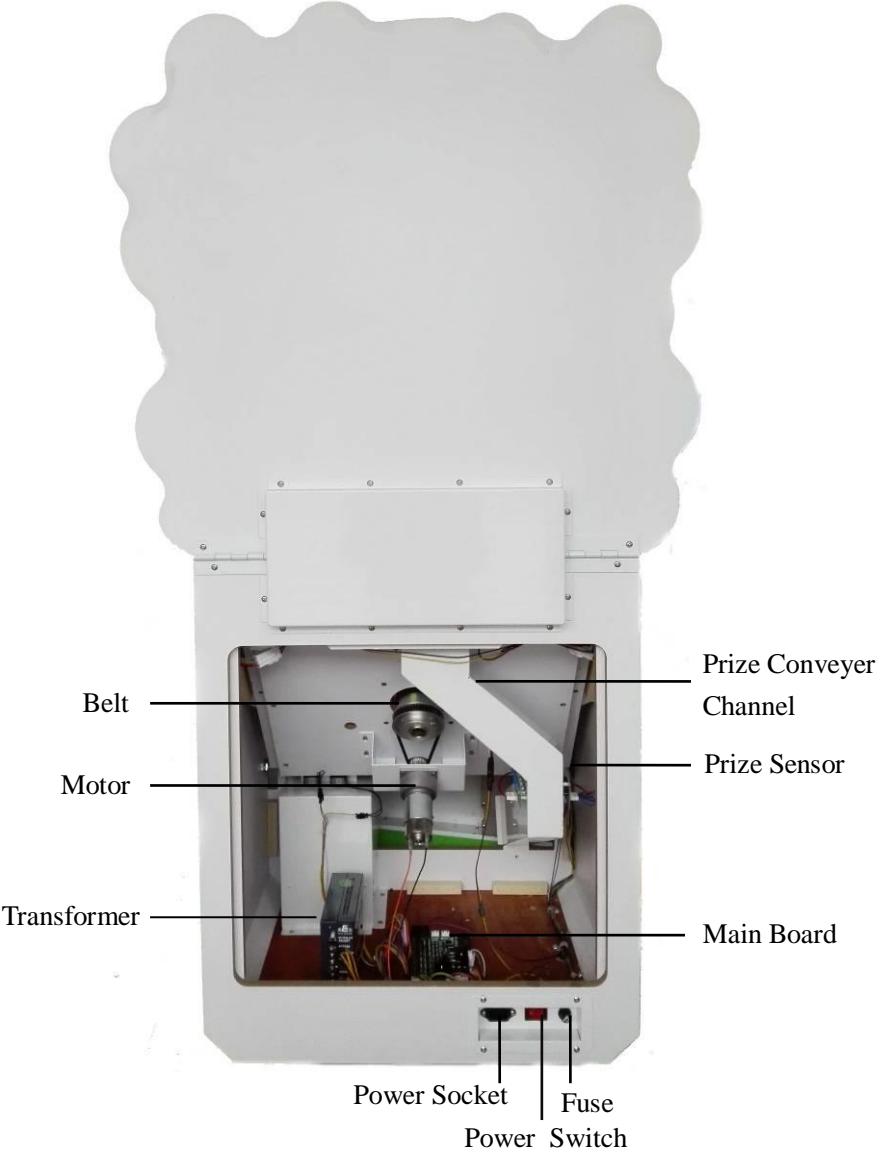

## Front Door inside View

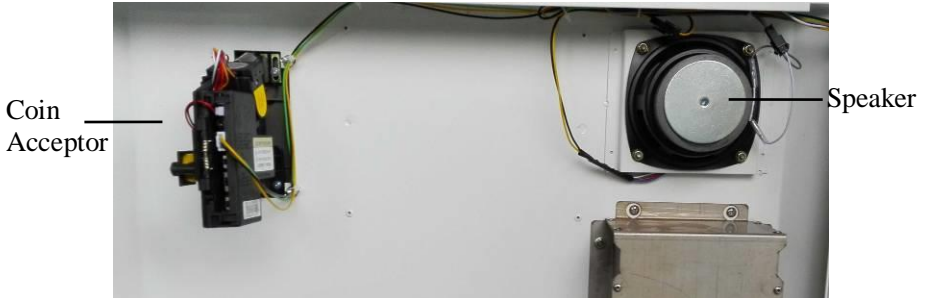

## IV. Auto Test

### 1. Start up auto test:


- Start button
- Coin acceptor
- Motor
- Prize sensor

Please don't touch start button or other parts when auto testing.

## 2. Error Code

Error code	Error
E1	Start button damage
E2	Prize sensor damage
E3	Motor or prize sensor damage

## V. Set up

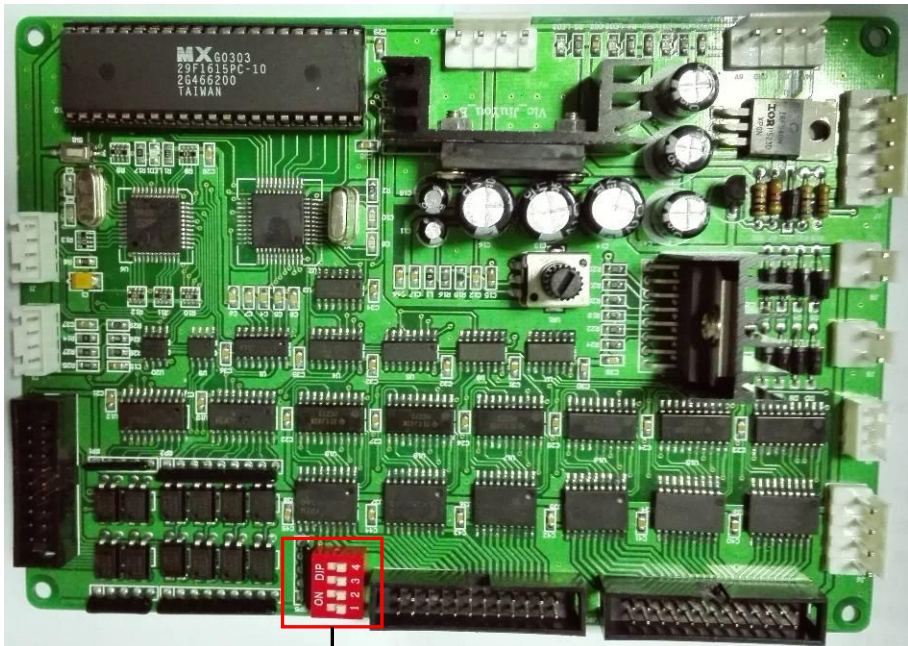

DIP





## 1. Coins per play

Coin	DIP Switch		
	1	2	3
0	ON	ON	ON
1	OFF	ON	ON
2	ON	OFF	ON
3	OFF	OFF	ON
4	ON	ON	OFF
5	OFF	ON	OFF
6	ON	OFF	OFF
7	OFF	OFF	OFF

## 2. Degree of difficulty

### Setting method

1. Machine power on.
2. Set Switch DIP – 4: OFF.
3. Press start button to choose difficulty.
4. Choose degree and set Switch DIP – 4: ON. Finish setup.

DIP- 4	
OFF	Standby
ON	Difficulty: 0-18

Difficulty list as following:

### Degree of difficulty and prize rate list

Degree of difficulty	prize rate	Total prize per 100 play	0 occurrence number	1 occurrence number	2 occurrence number	3 occurrence number	5 occurrence number
<b>0</b>	Random						
<b>1</b>	1.8	180	0	55	24	14	7
<b>2</b>	1.7	170	0	60	22	12	6
<b>3</b>	1.6	160	0	65	20	10	5
<b>4</b>	1.5	150	0	70	18	8	4
<b>5</b>	1.4	140	0	75	16	6	3
<b>6</b>	1.3	130	0	80	14	4	2
<b>7</b>	1.2	120	0	86	10	3	1
<b>8</b>	1.1	110	0	90	10	0	0
<b>9</b>	1	100	0	100	0	0	0
<b>10</b>	0.9	90	10	90	0	0	0
<b>11</b>	0.8	80	20	80	0	0	0
<b>12</b>	0.7	70	30	70	0	0	0
<b>13</b>	0.6	60	40	60	0	0	0
<b>14</b>	0.5	50	50	50	0	0	0
<b>15</b>	0.4	40	60	40	0	0	0
<b>16</b>	0.3	30	70	30	0	0	0
<b>17</b>	0.2	20	80	20	0	0	0
<b>18</b>	0.1	10	90	10	0	0	0

## **VI. Maintenance**

Keep the machine clean by using mild types of cleaners

Use NON-FLAMMABLE solvents for cleaning. DO NOT use gasoline kerosene or thinners.

## **VII. Warranty Terms**

1. 1 year limited warranty from date of delivery, other than abuse, natural calamities or improper servicing.
2. This warranty does not cover the following:
  - ◆ Damage due to improper installation and/or use.
  - ◆ Game abuse or misuse
  - ◆ Stuck or jammed coin mechanisms (caused by improper coin usage).
  - ◆ Damage from repairs or modifications without our authorization.
  - ◆ Damage incurred during shipping/transit from our warehouse.
  - ◆ Damage caused by weather, water, lightening or electrical damage.
  - ◆ Damage due to extreme heat over 90°F or temperatures below 65°F.

Get this game on [www.magicplay.eu](http://www.magicplay.eu)