

DINO LAND

Instructions

LIST

1. Specifications and technical parameters of the machine
2. Random accessories list
3. Game Description
4. Machine introduction
5. Common faults and Solutions
6. Parameter setting method

一、 Specifications and technical parameters of the machine

- 1) working voltage: 220V-240V
- 2) Power :150W, Net weight: 60KGS
- 3) size : W1400×D920×H640 (mm)

二、 Random accessories list

order	name	Model	Numb	Picture
1	Power	10A/25	1	
2	Launch wheel		2	
3	key		2	
4	English		1	
5	Optical eye switch		1	
6	Dinosaur		1	

三、 Game Description

- 1、 Insert coins
- 2、 Press the start button to start the game
- 3、 Press the handle switch button, the ball shoot out, knocking down the moving target of Dinosaur as many as possible , the more knock down, the more points can win
- 4、 The game is divided into two rounds, Pass the round 1 player can enter into round 2.
5. Game over, win tickets or capsule toys.

This equipment is the product developed by our company since Jan 2019 . It is deeply loved by the children at home and abroad.**Characteristic :**

- 1) unique appearance design, dazzling lighting effects
- 2) Simple and fun gameplay, the game ends with toy, or lottery award
- 3) the unique program has its own development, and the high quality electronic chip is selected, and the program is stable and efficient.
- 4.a variety of professional design, suitable for any style of playground and children's playground, choose the playground, the necessary facilities for the playground, can be placed in children's

playground, supermarket, video game city, shopping mall and other venues.

 
四、 Machine introduction

1) the size and general of the whole machine

Size 95*54*144cm

Power: 150W

2) the internal real picture and introduction of the whole machine

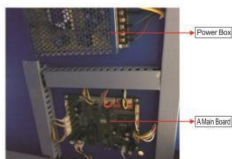

五、 .Common faults and Solutions

Failure phenomenon	Analysis	processing method
The whole machine is not working	1、 Power failure 2、 Damage of switch power box 3、 Safety pipe damage	1、 Check the power supply voltage fault AC 2、 +12 DC output, if there is no switch power box

		3、 Replacement of the insurance pipe
voice	1、 Trumpet bad 2、 The line of the horn is loosened 3、 Sound output problem, music chip 4、 The back button of the main board is shut down	1、 Change the trump 2、 Check line reconnection 3、 Check the motherboard music chip, change 4、 Turn the sound button on the main board to turn up the volume
Keep a capsule toys	1、 Light eye burn 2、 Main board burning	1、 Replacement 2、 replacement
Not reacting to the coin	1、 The machine is loose or bad.	1、 check or replace
capsule toys do not come out	1、 Get stuck or broken	1、 Artificial exclusion, check or replace
Do not launch a bullet	1、 No bullet 2、 stuck 3、 Launch wheel damage	1、 Fill 2、 Check 3、 replace
knockdown no score	1、 Scoring light bad	1、 replace
021	1、 Lack capsule toys 2、 Gashapon stuck	1、 fill 2、 check
022	Lottery failure	Check machine

methods for troubleshooting

一、 false report

021: capsule hopper motor broken , check the machine have any capsule toys,or motor ,or capsule

hopper sensor

022: Tickets failure, check the machine have any Tickets

二、NO ball out

Check whether the line head is off, or whether there is something on the ball.

The ball can't pop up normally

三、The bullet launches a small force or can not be sent out. Check whether the launch wheel is damaged Please pay attention to the red right and change the left position of the white when replace.

六、**Parameter setting method**

Open the back, find the key to open the stop on the motherboard



Adjustment instruction

Long Press Setting Key (2-3second) into setting

Long Press Setting Key (2-3second) into setting

C1=>Put1-10coins Play once setting (Switching by pressing the add-subtract key)

C2=>Target sub-setting 50points-200points

C3=>How many scores to get how many tickets, 1points-20points for one ticket

(If the capsule toys gift is set, it must be adjusted to 0.)

C4=>Volume control can adjust volume 1-10 as needed

C5=>The game time can be adjusted up to 90 seconds for highest level and 30 seconds for the lowest level.

C6 is English and Chinese language exchange

C7 is for link

D1 is for testing gun shooting balls:press + starting testing,press - stop .

ERROR 21 ,Capsule toys error, check capsule hopper with enough capsule toys or not, or hopper sensor problem

ERROR22,ticket error, check ticket dispensor

After setting up, press the key to exit and enter the main game. The check key can check the number of coins and gifts.

Reset button :Press 5 seconds or so to clear the number of coins and gifts.